



Fluid Power Specialist



## CP Elements instruction





### Clean Base

Unscrew and remove old filter. Be sure old gasket is removed with filter. Wipe filter mounting base with clean cloth.

### Apply clean oil to gasket

Apply thin film of clean motor oil to new filter gasket. **Do not use grease.**

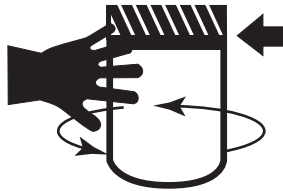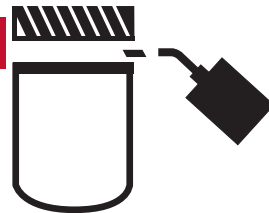


### Hand tighten to gasket contact

Line up threads carefully to avoid cross-threading. Spin new filter on until gasket contacts base.

### Tighten additional turns

**Important** — Follow instructions (usually found on filter) of the filter manufacturer for final tightening.


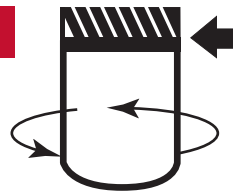


### No Leaks

Be sure oil shows full on dipstick. Start engine and check for leaks. Correct source of any leaks observed. Shut off engine, Re-check oil level. Add oil if necessary.

### Inspect for dents

**Important** — Do not use filter if it is dented.

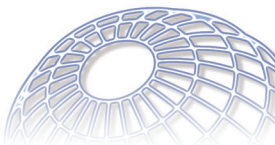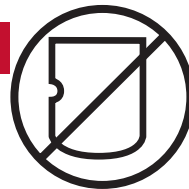

**HYDRAULICS**  
WITH A GLOBAL REPUTATION

