



# OXYGEN & ACETYLENE HOSE FITTINGS & CONNECTORS (Brass)

It is critical that the O.D. and I.D. of the hose and fitting correspond. EXAMPLE: 1/4" I.D. and 1/2" O.D. We use 99 Series fittings.

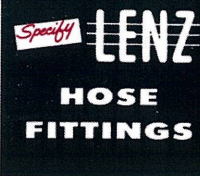

OXYGEN & ACETYLENE  
HOSE FITTINGS &  
CONNECTORS  
RE-USABLE TYPE  
BRASS

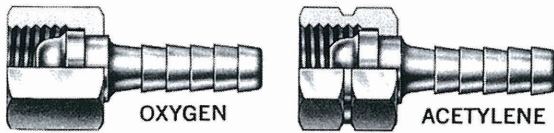


## Swivel CONNECTORS

Can Be Used With Brass Ferrules On Page 17

STEM & NUT	HOSE I.D.	TH'D. SIZE	STEM ONLY	NUT ONLY
2WR	3/16	3/16-18R.H.	2A	160D
2WL	3/16	3/16-18L.H.	2A	160E
2WSR	3/16	3/8-24R.H.	2AX	155D
2WSL	3/16	3/8-24L.H.	2AX	155E
12WR	1/4	3/16-18R.H.	12A	160D
12WL	1/4	3/16-18L.H.	12A	160E
18WR	3/8	3/16-18R.H.	18A	160D
18WL	3/8	3/16-18L.H.	18A	160E
22WR	3/8	3/16-18R.H.	22A	160D
22WL	3/8	3/16-18L.H.	22A	160E


## Swivel FITTINGS

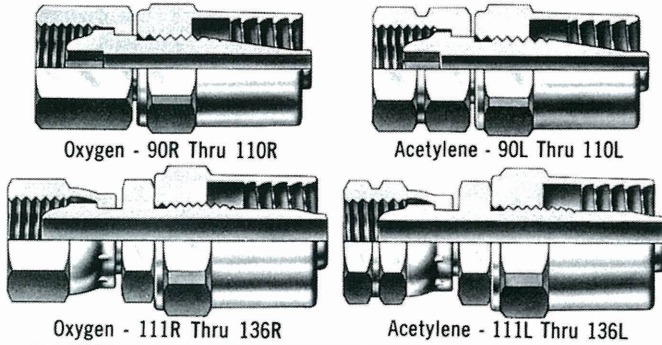

Oxygen - 111R Thru 136R

Acetylene - 111L Thru 136L


OXYGEN FITTING R.H. THREAD	ACETYLENE FITTING L.H. THREAD	THREAD SIZE	HOSE I.D.	HOSE O.D.
90R	90L	3/16-18	3/16	3/16
93R	93L	3/16-18	3/16	1/2
95R	95L	3/16-18	3/16	15/32
96R	96L	3/16-18	3/16	3/8
97R	97L	3/16-18	1/4	15/32
98R	98L	3/16-18	1/4	15/32
99R	99L	3/16-18	1/4	1/2
100R	100L	3/16-18	1/4	15/32
101R	101L	3/16-18	1/4	3/8
102R	102L	3/16-18	1/4	3/8
103R	103L	3/16-18	1/4	21/32
104R	104L	3/16-18	1/4	11/16
105R	105L	3/16-18	1/4	3/4
106R	106L	3/16-18	5/16	3/8
107R	107L	3/16-18	5/16	3/8
108R	108L	3/16-18	3/8	21/32
109R	109L	3/16-18	3/8	11/16
110R	110L	3/16-18	5/16	3/4
112R	112L	3/16-18	3/8	3/8
113R	113L	3/16-18	3/8	21/32
114R	114L	3/16-18	3/8	11/16
115R	115L	3/16-18	3/8	3/4
135R	135L	3/16-18	1/2	3/4
136R	136L	3/16-18	1/2	3/8

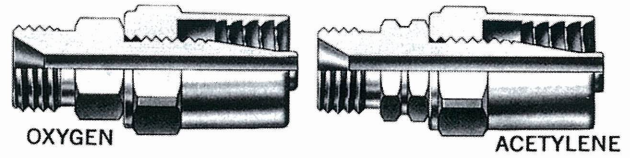

## Male FITTINGS

OXYGEN FITTING R.H. THREAD	ACETYLENE FITTING L.H. THREAD	THREAD SIZE	HOSE I.D.	HOSE O.D.
90WR	90WL	3/16-18	3/16	3/16
93WR	93WL	3/16-18	3/16	1/2
95WR	95WL	3/16-18	3/16	15/32
96WR	96WL	3/16-18	3/16	3/8
97WR	97WL	3/16-18	1/4	15/32
98WR	98WL	3/16-18	1/4	15/32
99WR	99WL	3/16-18	1/4	1/2
100WR	100WL	3/16-18	1/4	15/32
101WR	101WL	3/16-18	1/4	3/8
102WR	102WL	3/16-18	1/4	3/8
103WR	103WL	3/16-18	1/4	21/32
104WR	104WL	3/16-18	1/4	11/16
105WR	105WL	3/16-18	1/4	3/4


## ADAPTERS

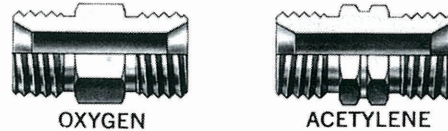

Straight Thread Both Ends  
Also See Page 14 For Other  
Oxygen & Acetylene Adapters

PART NO.	THREAD SIZE	HEX SIZE
4ADR	3/16-18 R.H. to 3/16-18 R.H.	3/16
4ADL	3/16-18 L.H. to 3/16-18 L.H.	3/16

## Male HOSE STEMS



Can Be Used With Brass Ferrules On Page 17

OXYGEN STEM R.H. THREAD	ACETYLENE STEM L.H. THREAD	THREAD SIZE	HOSE I.D.
12MR	12ML	3/16-18	1/4


## OXYGEN & ACETYLENE NUTS

OXYGEN



OXYGEN R.H. THREAD	ACETYLENE L.H. THREAD	THREAD SIZE
160D	160E	3/16-18
155D	155E	3/8-24

ACETYLENE



### Attention:

None of the hose fittings manufactured and/or sold by THE LENZ COMPANY are to be used for life dependency applications such as in diving, for oxygen, air, or other breathing applications.

There are instances where the weight of long hose lines would be on the fitting with the possibility of the hose pulling out of the fitting. This could have disastrous results in a breathing application.

We specifically call your attention to the 90 through 136 Low Pressure Fittings shown in this Catalog LP 301, WDM, or revisions thereof. These fittings are intended for welding, low pressure hydraulics or pneumatics.

This non-use for life dependency applications such as in diving, for oxygen, air or other breathing applications applies to all of the hose fittings manufactured and/or sold by THE LENZ COMPANY and/or related companies. None of our fittings are designed for this type of use.