



STEEL and BRASS ADAPTERS FOR LOW PRESSURE FITTINGS

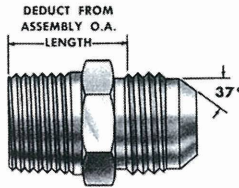


**LENZ 3105
MALE ADAPTERS**
Male Pipe To
J.I.C. Thread

PART NO.	MALE PIPE TH'D.	J.I.C. TH'D.	DEDUCT FROM ASS'Y. O.A.L.	USE WITH THESE FITTINGS
3105-8-4	1/4	3/4-16	3/32	205HU THRU 209HU
3105-8	3/8	3/4-16	3/32	
3105-8-8	1/2	3/4-16	1/32	
3105-8-12	3/4	3/4-16	1/32	
3105-12-8	1/2	1 1/8-12	1/4	214HU THRU 217HU
3105-12	3/4	1 1/8-12	1/32	
3105-12-16	1"	1 1/8-12	1/2	224HU THRU 226HU
3105-16-12	3/4	1 1/8-12	1/32	
3105-16	1"	1 1/8-12	1 1/32	245HU
3105-24-20	1 1/4	1 1/8-12	1 5/8	
3105-24	1 1/2	1 1/8-12	1 3/32	

**37° FLARE STEEL
ADAPTERS FOR USE
WITH 1/2", 3/4"
1" & 1 1/2" STEEL
FITTINGS • SERIES
205 THROUGH 245**
Shown On Page 3 Of
This Catalog

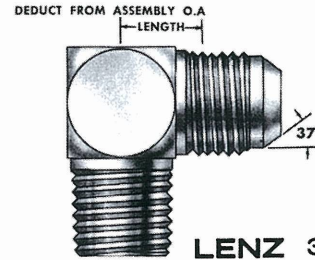

**LENZ 3405
MALE ELBOW
ADAPTER**
Male Pipe To J.I.C. Thread

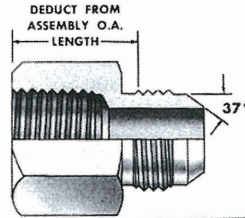


**LENZ
3255
FEMALE
ADAPTER**
Female Pipe
To J.I.C.
Thread

PART NO.	FEMALE PIPE TH'D.	J.I.C. TH'D.	DEDUCT FROM ASS'Y. O.A.L.	USE WITH THESE FITTINGS
3255-8-4	1/4	3/4-16	1"	205HU THRU 209HU
3255-8	3/8	3/4-16	1"	
3255-8-8	1/2	3/4-16	1 1/32	
3255-12-8	1/2	1 1/8-12	1 1/4	214HU THRU 217HU
3255-12	3/4	1 1/8-12	1 1/8	
3255-16-12	3/4	1 1/8-12	1 1/32	224HU THRU 226HU
3255-16	1"	1 1/8-12	1 1/32	
3255-24	1 1/2	1 1/8-12	1 3/32	245HU

PART NO.	MALE PIPE TH'D.	J.I.C. TH'D.	DEDUCT FROM ASS'Y. O.A.L.	USE WITH THESE FITTINGS
3405-8-4	1/4	3/4-16	2 3/32	205HU THRU 209HU
3405-8	3/8	3/4-16	2 3/32	
3405-8-8	1/2	3/4-16	7/8	
3405-8-12	3/4	3/4-16	3 3/32	
3405-12-8	1/2	1 1/8-12	1 1/8	214HU THRU 217HU
3405-12	3/4	1 1/8-12	3 3/32	
3405-16-12	3/4	1 1/8-12	1 1/8	224HU THRU 226HU
3405-16	1"	1 1/8-12	1 1/8	
3405-24	1 1/2	1 1/8-12	1 1/32	245HU

SEE LENZ HOSE FITTING CATALOG - HP-401 - FOR ADDITIONAL 37° FLARE FITTINGS

UNION FITTING BRASS HOSE ADAPTERS

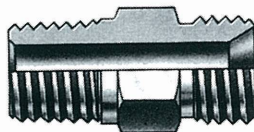


**1AD THROUGH 7AD
1ADL THROUGH 3ADL**

For Use With R, L, and HU Fittings
Shown in Tables Below

UNION MALE ADAPTERS — STRAIGHT THREAD, ONE END — TAPERED MALE PIPE THREAD, OTHER END			
PART NO.	THREAD SIZE	HEX SIZE	USE WITH THESE FITTINGS
1AD*	5/16-18R.H. to 1/8MPT	5/16	90HU THRU 115HU & 90R THRU 136R
3AD*	3/8-18R.H. to 1/4MPT	3/8	
3AD, HEAVY*	3/8-18R.H. to 1/4MPT	1 1/16	
5AD*	1/2-18R.H. to 3/8MPT	1 1/8	
7AD*	3/4-18R.H. to 1/2MPT	7/8	90L THRU 136L
1ADL†	5/16-18L.H. to 1/8MPT	5/16	
3ADL†	3/8-18L.H. to 1/4MPT	3/8	
Male Adapters for 135HU and 136HU See Page 18 (5105 Series)			

* OXYGEN
ADAPTERS

† ACETYLENE
ADAPTERS

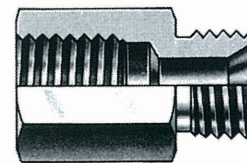

**1ADF THROUGH 5ADF
1ADFL**

For Use With R, L, and HU Fittings
Shown in Tables Below

UNION FEMALE ADAPTERS — STRAIGHT THREAD, ONE END — TAPERED FEMALE PIPE THREAD, OTHER END			
PART NO.	THREAD SIZE	HEX SIZE	USE WITH THESE FITTINGS
1ADF*	5/16-18R.H. to 1/8FPT	5/16	90HU THRU 115HU 90R THRU 136R &
3ADF*	3/8-18R.H. to 1/4FPT	3/8	
5ADF*	1/2-18R.H. to 3/8FPT	1 1/8	
1ADFL†	5/16-18L.H. to 1/8FPT	5/16	90L THRU 136L
Female Adapters For 135HU and 136HU See Page 19 (5255 Series)			